



COPENHAGEN

ROBE HOOK

Installation & Owner's Guide

FINISHES IN THIS GUIDE

COP-RH-C	Chrome
COP-RH-MB	Matte Black
COP-RH-BN	Brushed Nickel
COP-RH-GM	Brushed Gunmetal
COP-RH-AB	Antique Brass
COP-RH-BB	Brushed Brass

Read this guide before you begin.

IVM-MAN-COP-NZ-01

Revision A · October 2026 · New Zealand edition

invoguemirrors.co.nz

Safety and compliance

Read this page in full before you begin. Share it with your installer.

Before you begin

Unpack the accessory and check it for damage and missing parts. Confirm this is the model and finish you ordered.

Check the wall


Check for hidden water pipes and electrical cables before you drill.

Fixings

Use fixings that suit your wall. The factory method uses wall plugs and screws.

Your Copenhagen

A round robe hook on a slim post. All dimensions in millimetres.

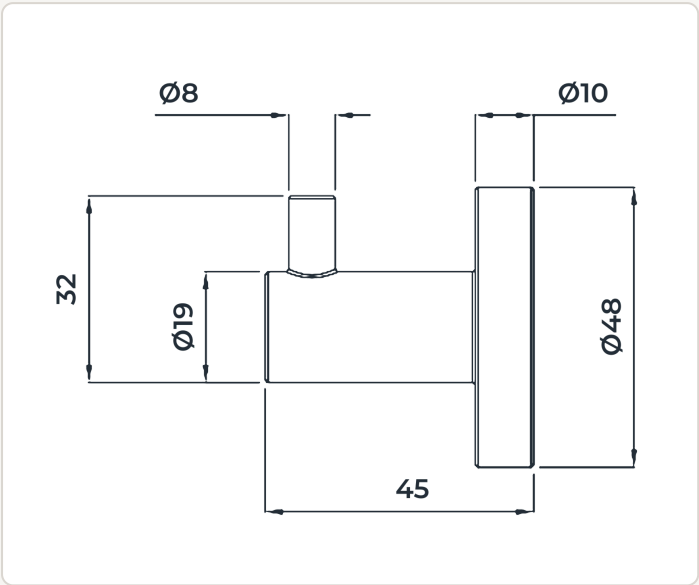

SPECIFICATION


Projection from wall	45 mm
Wall flange	Ø48 mm
Body	304 stainless steel

INSTALLATION DATA

Mounting	Screw-fixed to the wall
Fixings	Screws and wall plugs (factory method)


Installation

The steps follow the manufacturer's method.

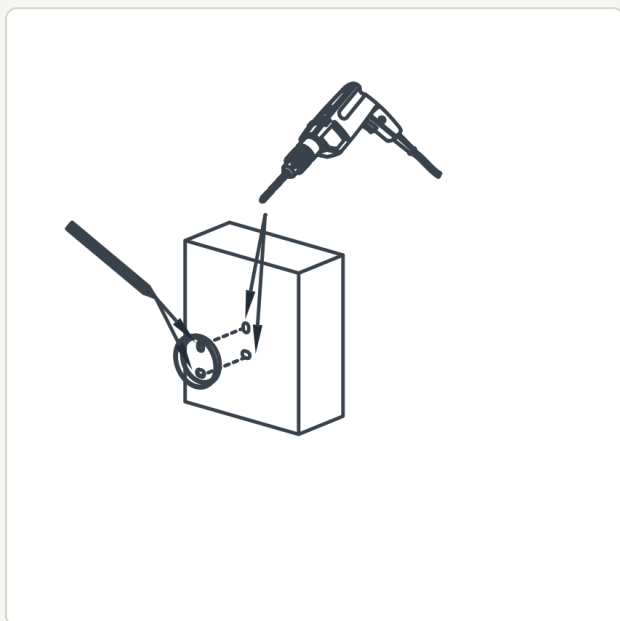


1 Mark the holes

Hold the mounting base against the wall where it will go, mark the holes and drill them.

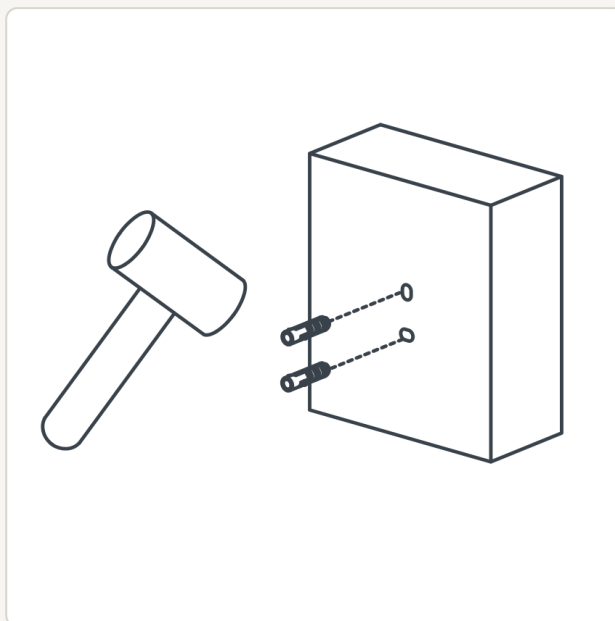


2 Fit the wall plugs

Push the wall plugs into the holes.

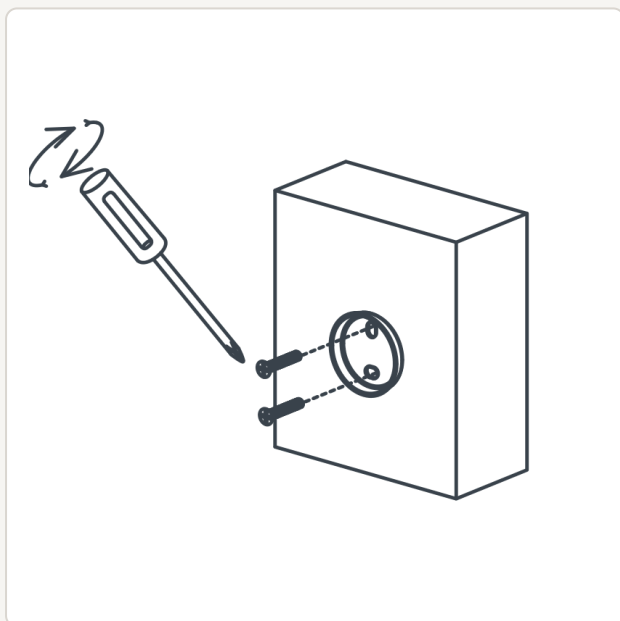

3 Fix the base

Line the base up with the holes and screw it to the wall.

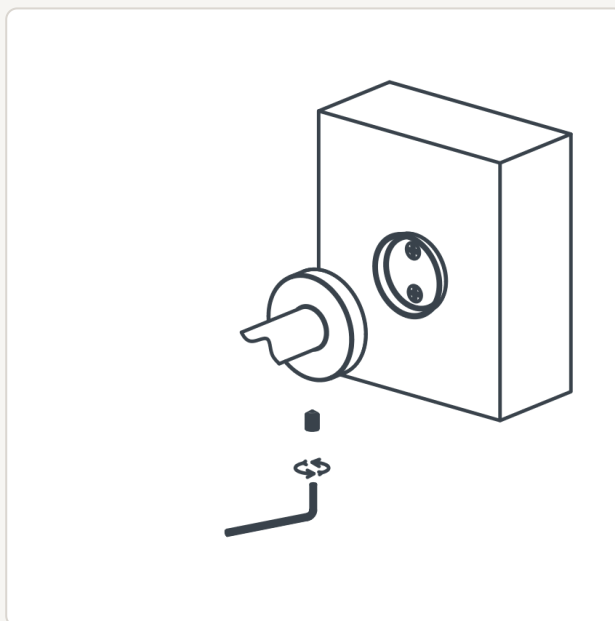

4 Fit the product

Fit the product over the base and tighten the grub screw underneath with the Allen key.

Caring for your Copenhagen

Cleaning

Clean with warm soapy water and a **soft cloth** only.
Rinse and dry to keep the finish looking its best.

Never use

Cleaners containing acids (including vinegar), chlorine or caustic soda, abrasive powders, scourers or brushes. They damage the finish and are not covered by the warranty.

TROUBLESHOOTING

It moves on the wall

Re-tighten the grub screw underneath, then the fixing screws.

Still not right? Email us with your order number (page 06).

Warranty and support

Your Copenhagen Robe Hook is covered against defects in materials and workmanship. The full warranty terms are at invoguemirrors.co.nz/pages/warranty.

In addition to your rights under the Consumer Guarantees Act 1993.

QUESTIONS OR A CLAIM

Email us with your order number and a photo of the issue.

info@invoguemirrors.co.nz

Full warranty terms:
invoguemirrors.co.nz/pages/warranty

YOUR RECORD

Finish and product
code

Date purchased

Order number

Installed by

Installation date