



VERSAILLES

HAND SHOWER WITH WALL OUTLET

Installation & Owner's Guide

FINISHES IN THIS GUIDE

VER-HS-C	Chrome
VER-HS-MB	Matte Black
VER-HS-BN	Brushed Nickel
VER-HS-GM	Brushed Gunmetal
VER-HS-AB	Antique Brass
VER-HS-BB	Brushed Brass

Read this guide before you begin.

This product must be installed by a licensed plumber, to the NZ Building Code (G12).

IVM-MAN-VER-NZ-01

Revision A · October 2026 · New Zealand edition

invoguemirrors.co.nz

Safety and compliance

Read this page in full before you begin. Share it with your installer.

▲ LICENSED PLUMBER

This product must be installed by a licensed plumber. All work must comply with the NZ Building Code (G12). This is a general guide; your installer may adapt the method to suit your site.

Before you begin

Unpack the shower and check it for damage and missing parts. Confirm this is the model and finish you ordered.

Check the fitting

Check the water outlet in the wall or ceiling is a ½" BSP fitting and stands out by the distance on page 04.

Flush the pipework

Flush the supply before connecting the shower, to clear debris that could block the spray nozzles.

Thread sealing


Seal threaded joints as your plumber specifies, without over-tightening onto the finish.

TEST BEFORE YOU FINISH

Test fully for leaks before you tile, line or finish anything that would make the connections hard to reach. We can't cover the cost of removing a product that was not tested before finishing work.

Your Versailles

A slim stick hand shower with a combined wall outlet and holder. All dimensions in millimetres.

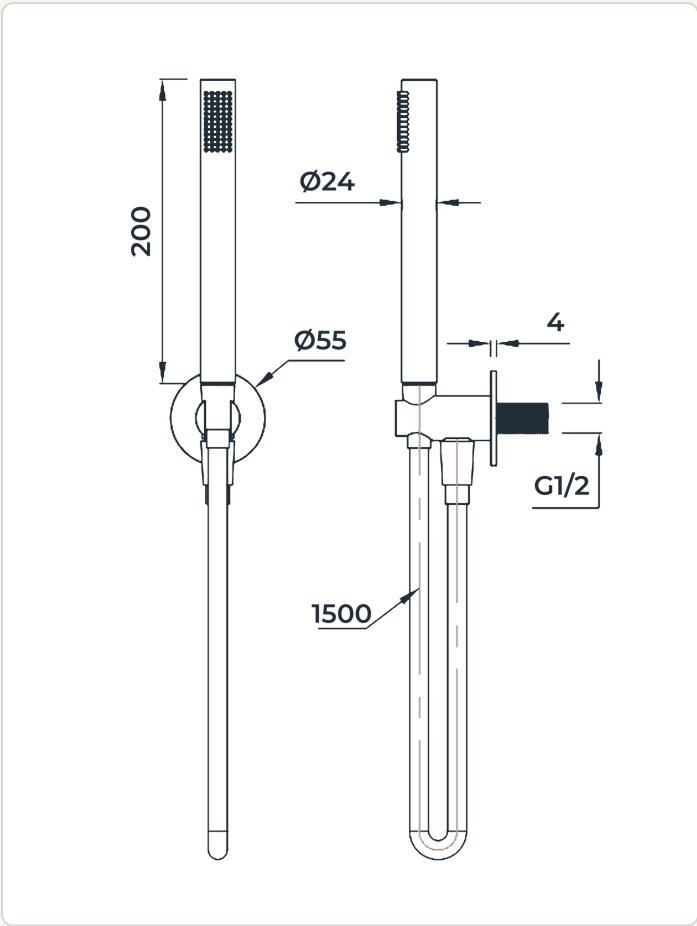

SPECIFICATION

WELS rating	3 Star · 8.5 L/min
WELS registration	S17309
WaterMark licence	WM-022555 · AS/NZS 3662
Hand shower	200 mm long
Wall outlet	Ø55 mm
Connection	½" BSP
Body	Brass and 304 stainless steel

INSTALLATION DATA

Mounting	Wall outlet with holder
Water connection	½" BSP wall fitting
Fitting protrusion	12–18 mm from the finished wall
Installation	Licensed plumber, to the NZ Building Code (G12)

Planning

Check these with your installer before anything is cut or fixed.

Wall fitting


A $\frac{1}{2}$ " **BSP** wall fitting that stands **12–18 mm** out from the finished wall.

Position

Set the outlet where the hand shower is easy to reach when seated or standing.


Installation

The steps follow the manufacturer's method.

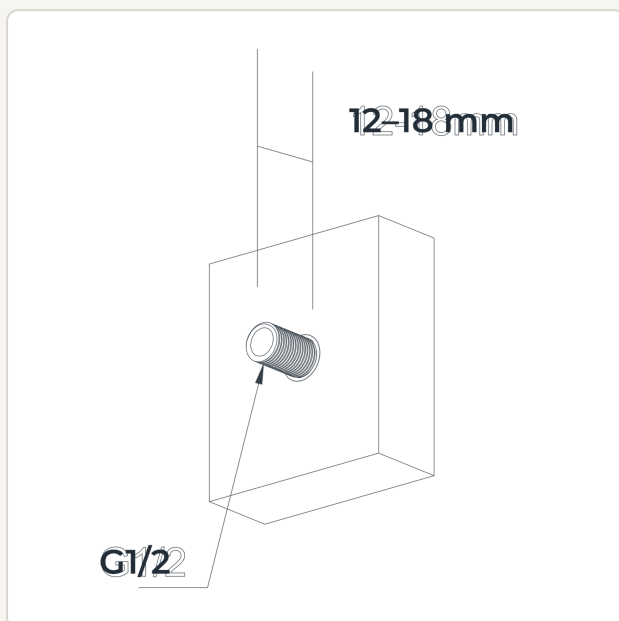


1 Check the fitting

Make sure the water outlet is the correct ½" BSP fitting, standing out by the distance shown.

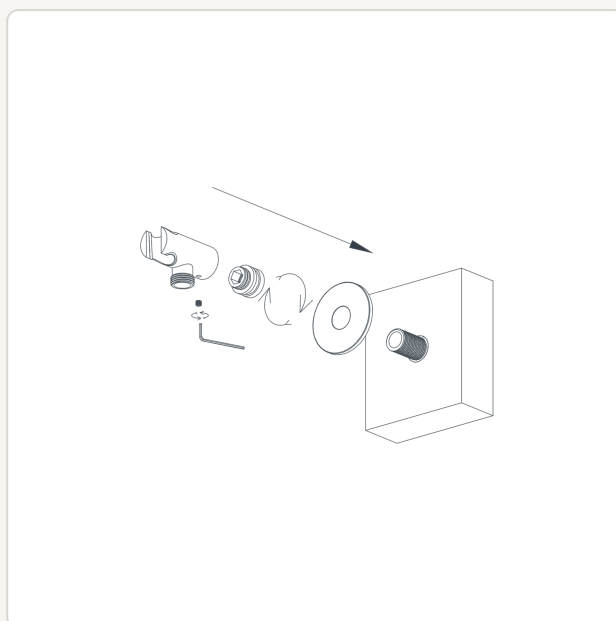


2 Fit the wall outlet

Slide the cover plate onto the outlet first, then connect the wall outlet and holder and tighten it.

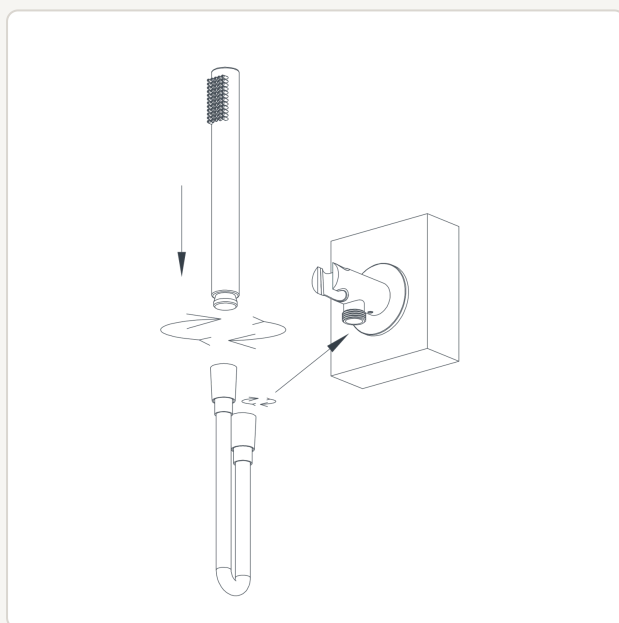

3 Fit the hose

Connect the hose to the wall outlet and to the hand shower, then tighten both connections.

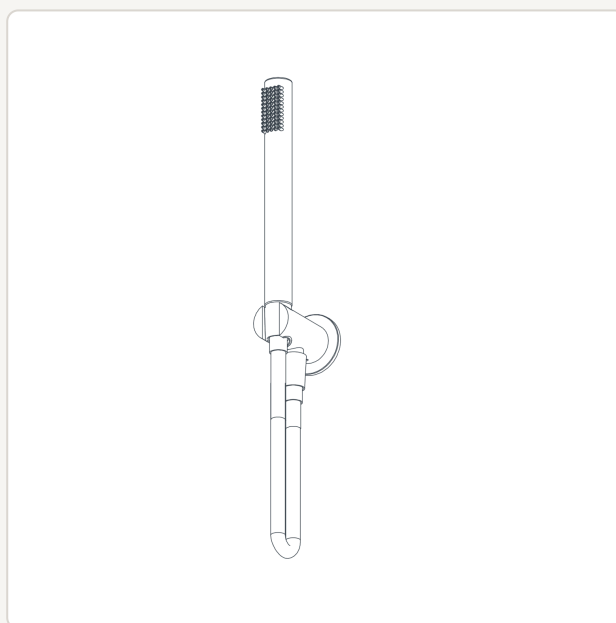

4 Test for leaks

Run water through the hand shower and check every joint for leaks before tiling.

Caring for your Versailles

Cleaning

Clean with warm soapy water and a **soft cloth** only. Rinse and dry to keep the finish looking its best.

Never use

Cleaners containing acids (including vinegar), chlorine or caustic soda, abrasive powders, scourers or brushes. They damage the finish and are not covered by the warranty.

TROUBLESHOOTING

Spray is uneven	Wipe the nozzles with a soft cloth to clear mineral build-up.
A joint weeps	Turn the water off and have the joint re-sealed.

Still not right? Email us with your order number (page 07).

Warranty and support

Your Versailles Hand Shower is covered against defects in materials and workmanship. The full warranty terms are at **invoguemirrors.co.nz/pages/warranty**.

In addition to your rights under the Consumer Guarantees Act 1993.

QUESTIONS OR A CLAIM

Email us with your order number and a photo of the issue.
info@invoguemirrors.co.nz
Full warranty terms:
invoguemirrors.co.nz/pages/warranty

YOUR RECORD

Finish and product
code

Date purchased

Order number

Installed by

Installation date